


HOME DECORATORS C O L L E C T I O N

SK13560R1 WELLMAN CUBBY BENCH W/CUSHION 20"Hx38"Wx15.75"D

INV#11582













ASSEMBLY INSTRUCTIONS





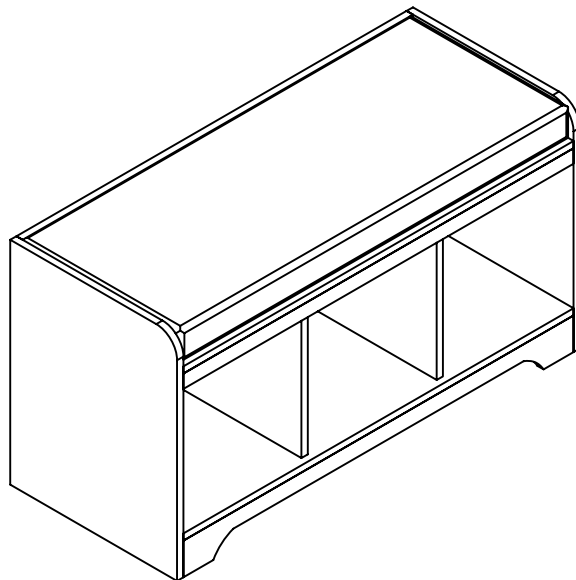

Made In China

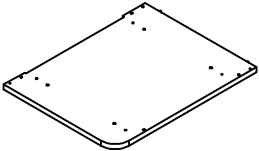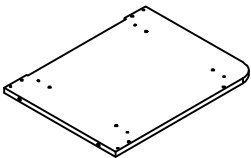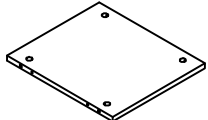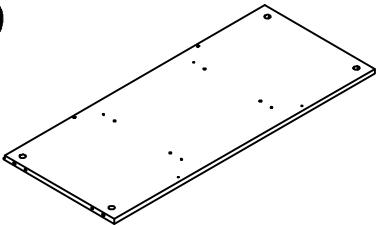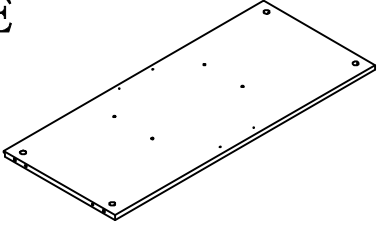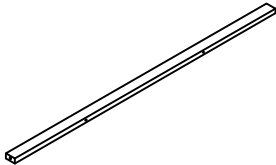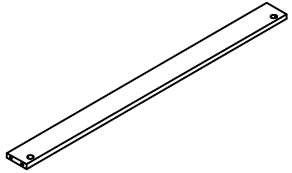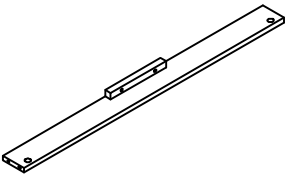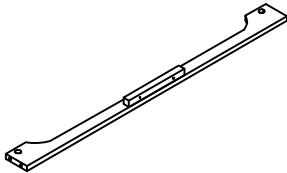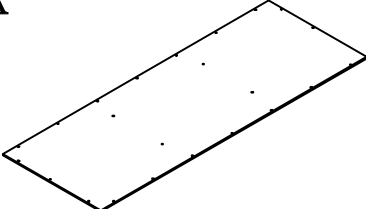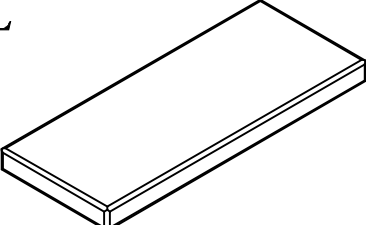

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.



IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast,easy and correct assembly.

PARTS LIST		
A  LEFT SIDE PANEL-1PC	B  RIGHT SIDE PANEL-1PC	C  DIVIDER-2PCS
D  TOP PANEL-1PC	E  BOTTOM PANEL-1PC	F  UPPER FRONT CROSS BAR-1PC
G  UPPER BACK CROSS BAR-1PC	H  LOWER BACK CROSS BAR-1PC	I  LOWER FRONT CROSS BAR-1PC
J  SUPPORT PANEL-2PCS	K  BACK PANEL-1PC	L  CUSHION-1PC

a	b	c
		
WOOD DOWEL-28PCS	CAM LOCK BOLT22PCS	CAM LOCK-22PCS
d	e	f
		
1/2"L ROUND HEAD SCREW-24PCS	FLAT HEAD SCREW-12PCS	PLASTIC COVER-8PCS



NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

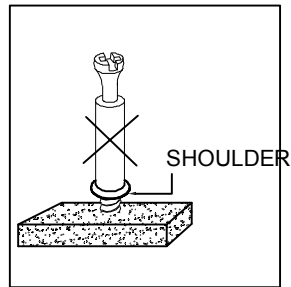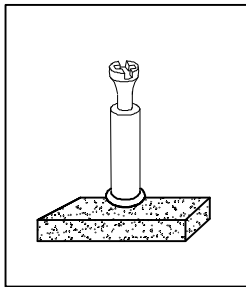


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

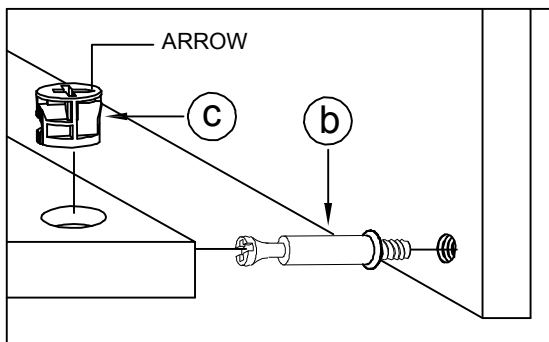


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.

FIG 1

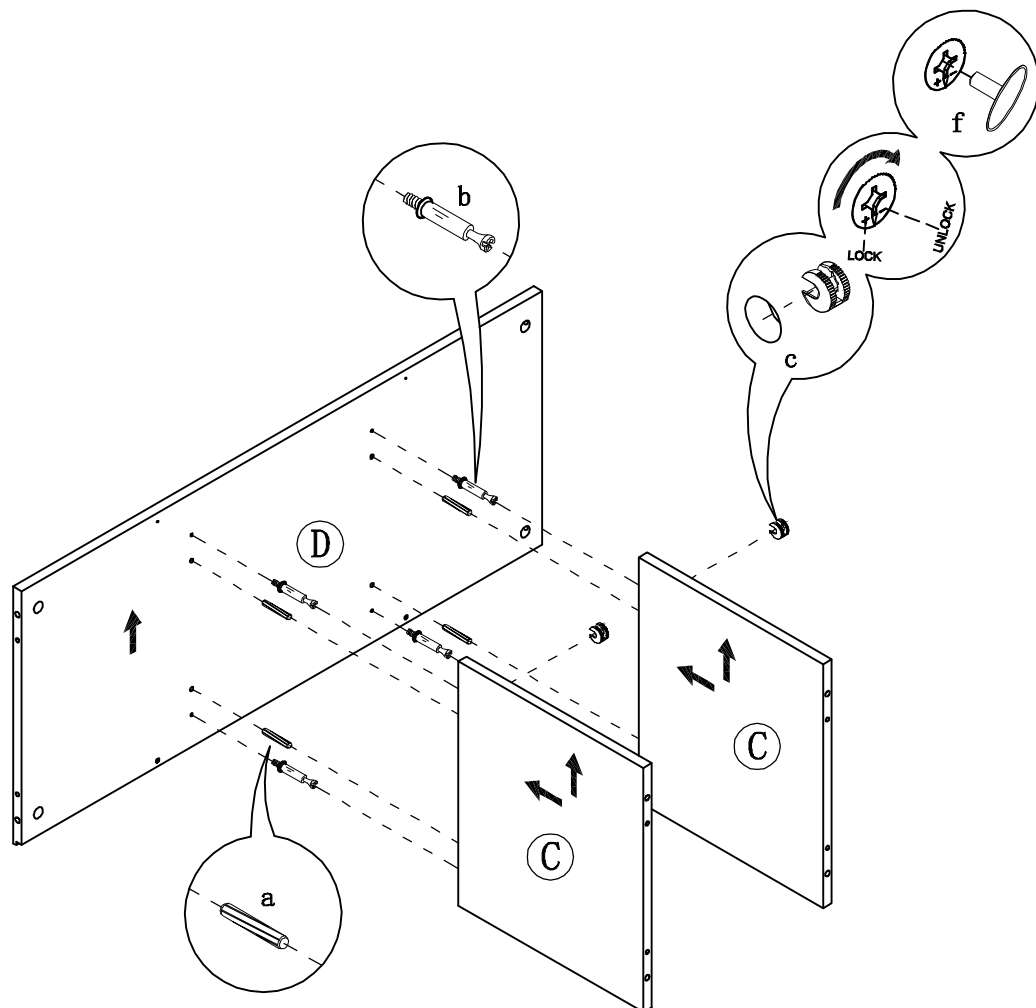


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE TOP PANEL (D).
- JOIN THE TOP PANEL (D) TO THE DIVIDER (C) BY USING WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH PLASTIC COVER (f).

FIG 2

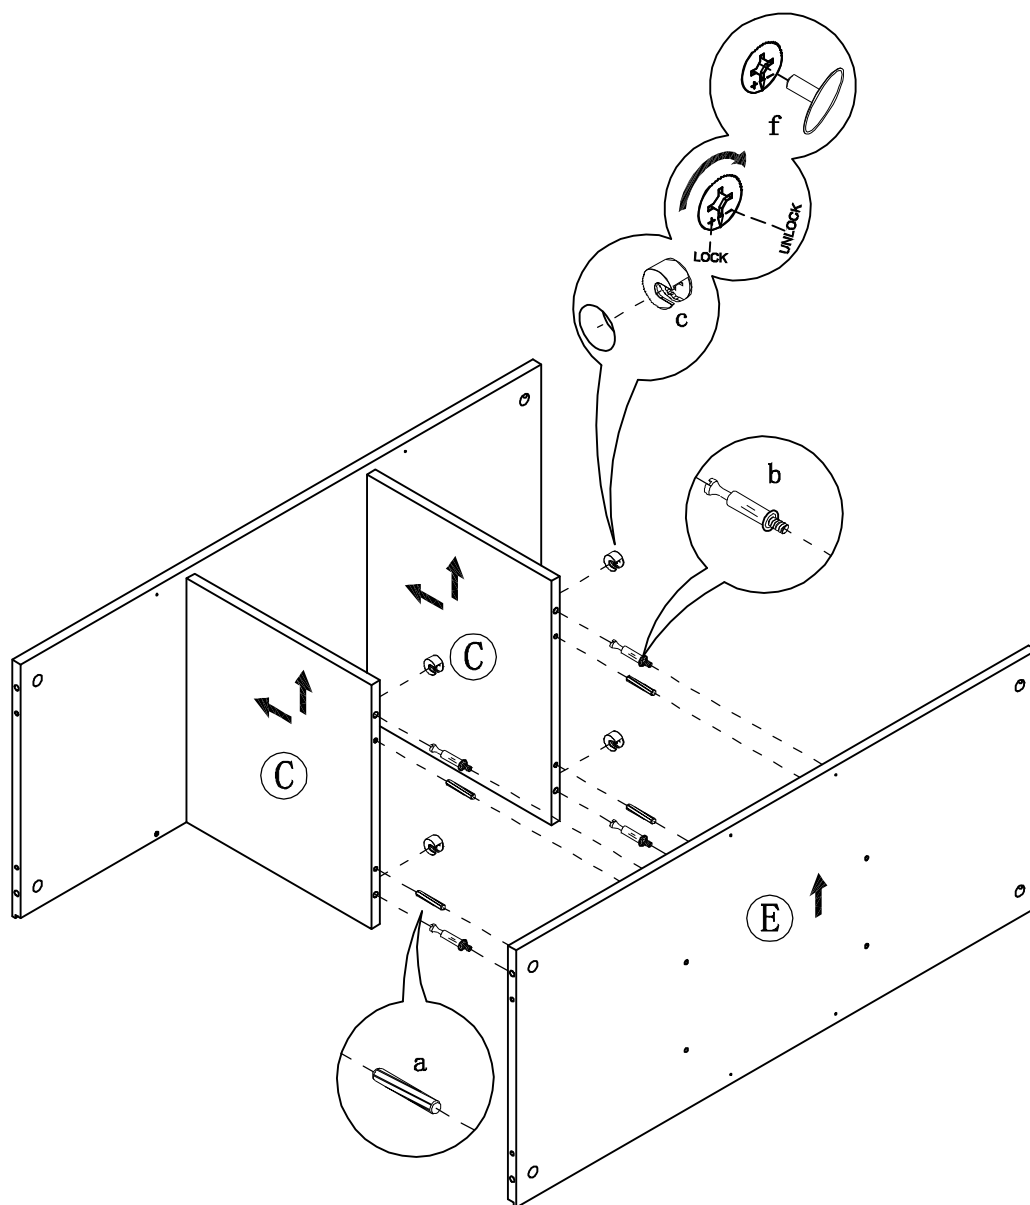


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE BOTTOM PANEL (E).
- JOIN THE BOTTOM PANEL (E) TO THE DIVIDER (C) BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH PLASTIC COVER (f).

FIG 3

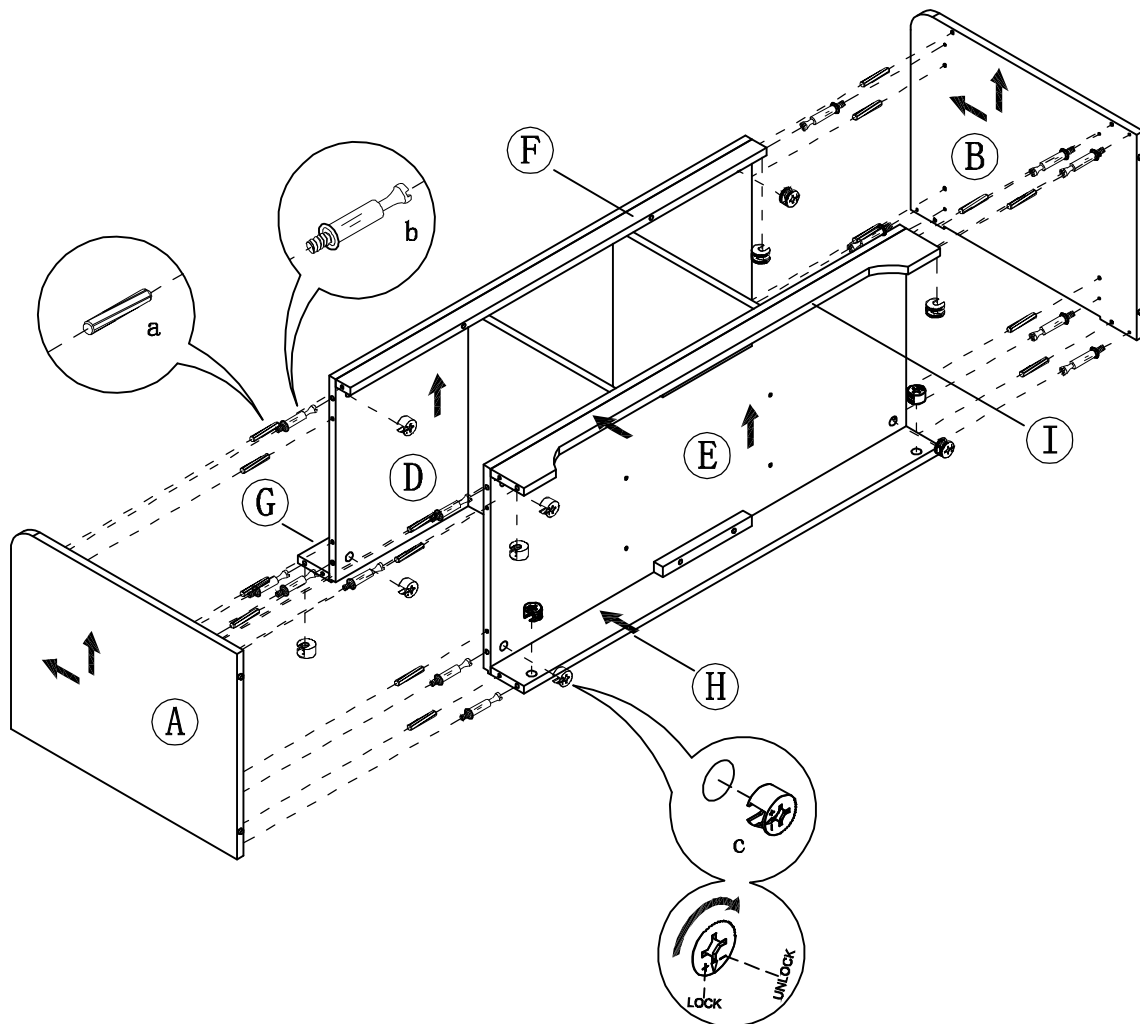


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE LEFT SIDE PANEL (A) AND THE RIGHT SIDE PANEL (B).
- JOIN THE LEFT SIDE PANEL (A) AND THE RIGHT SIDE PANEL (B) TO THE ASSEMBLED PART, THE UPPER FRONT CROSS BAR (F), THE UPPER BACK CROSS BAR (G), THE LOWER BACK CROSS BAR (H), AND THE LOWER FRONT CROSS BAR (I) BY USING WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH PLASTIC COVER (f).

FIG 4

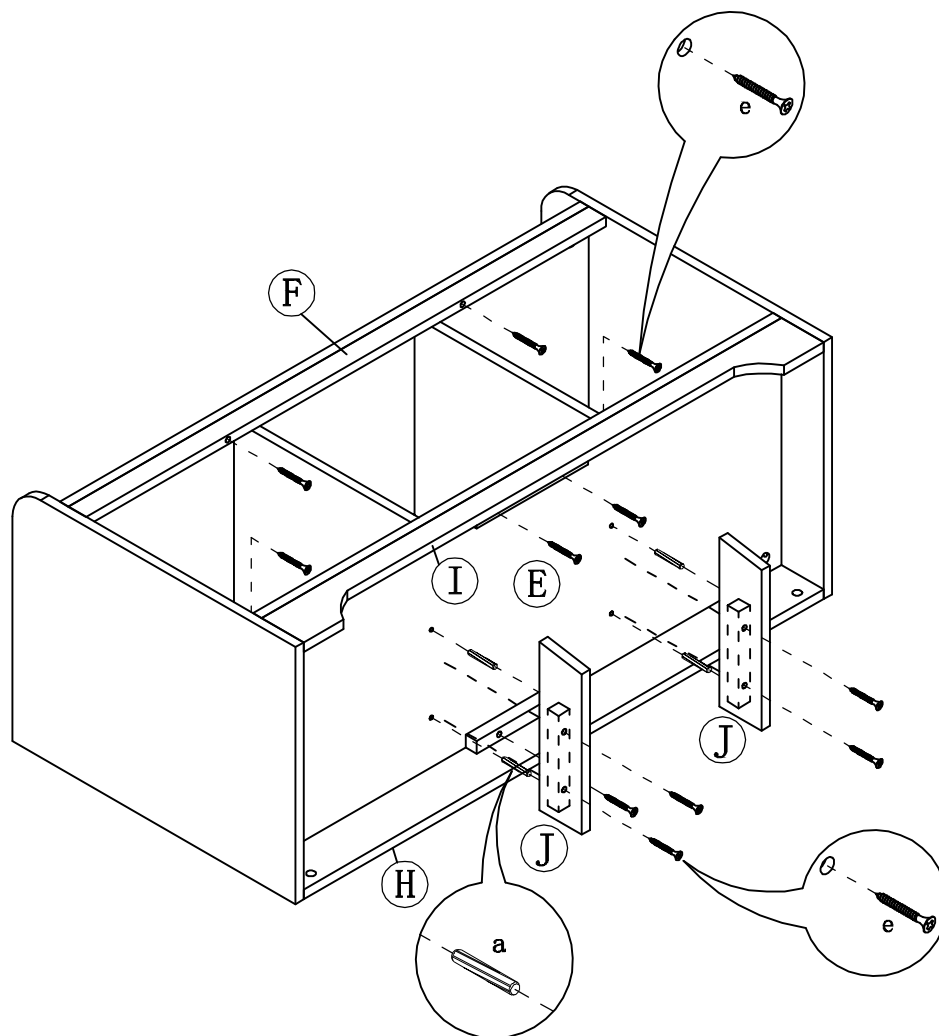


- TIGHTEN THE UPPER FRONT CROSS BAR (F), THE LOWER FRONT CROSS BAR (I), AND THE LOWER BACK CROSS BAR (H) BY USING THE FLAT HEAD SCREW (e).
- JOIN THE SUPPORTIVE PANEL (J) TO THE BOTTOM PANEL (E) BY USING THE WOOD DOWEL (a) FIRST.
- TIGHTEN THE SUPPORTIVE PANEL (J) BY USING THE FLAT HEAD SCREW (e) THROUGH PRE-DRILLED HOLES.

FIG 5

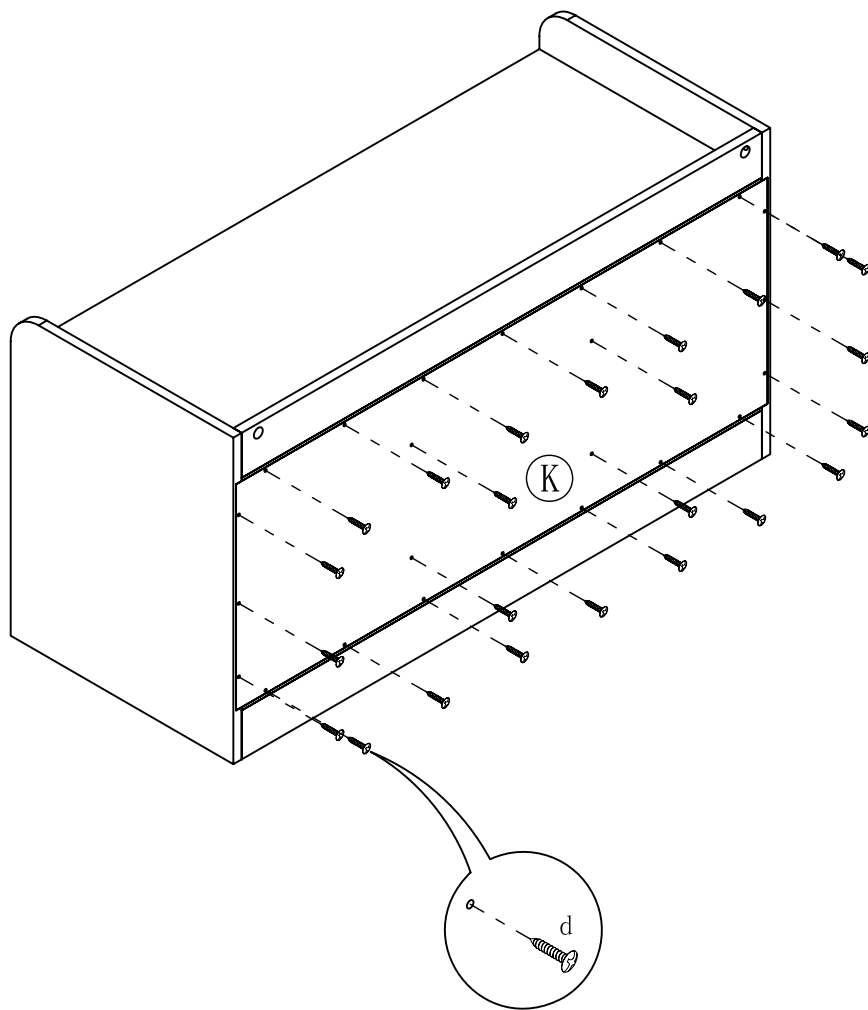

- TIGHTEN THE BACK PANEL (k) BY USING THE 1/2" L ROUND HEAD SCREW (d).

FIG 6

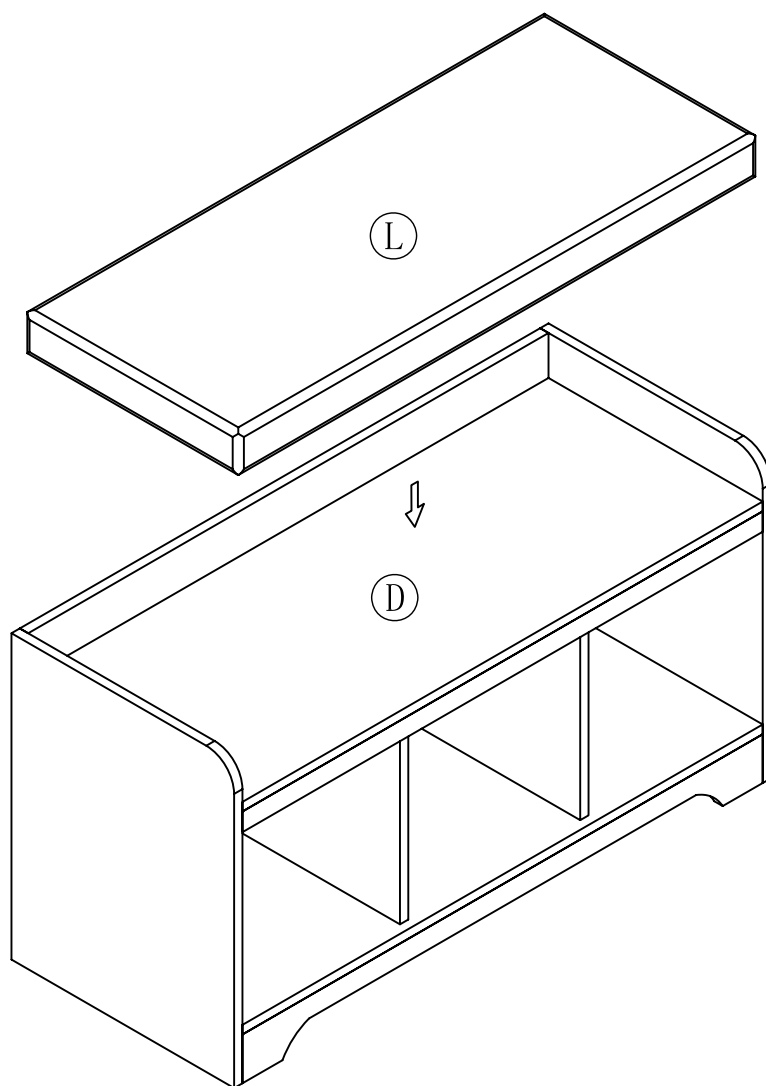

- PLACE THE CUSHION (L) ABOVE THE TOP PANEL (D).